

RT50 indicator LED

Green light	Yellow light	Meaning
ON	ON	RT50 is in the software boot loader. This happens when the RT50 is being reprogrammed.
OCCASSIONAL SHORT FLASH	OFF	The RT50 is operational and probably has enough charge to complete a therapy session.
SHORT FLASHES	OFF	RT50 is charging.
LONG FLASHES	OFF	RT50 is charged to a level where it can be used for a therapy.
OCCASIONAL DOUBLE SHORT FLASHES	OFF	RT50 battery is very low, and charging may take over 24 hours.
ON	OFF	RT50 is fully charged.
OFF	OFF	No LED on: RT50 will need to be charged before it can be used.
OFF	ON	RT50 is being used in a therapy and is either stimulating or is ready to stimulate.